

ASSEMBLY INSTRUCTIONS

KITCHEN BASE BLIND CORNER CABINET

BBC36

This instruction sheet applies all kitchen base blind corner cabinets assembly.

PLEASE NOTE: This unit is ready to assembly for a door right installation. -To prepare for door left it will be necessary to assure and spot the holes for mounting the drawer boots on the back panel from the right side to the left side. This must be done before assembly. The door must also be reversed to the other side of the Faceframe.

The following parts are included in this carton. Separate and check to see that all parts are accounted for before beginning assembly. If you are missing parts use the form enclosed and fax or mail to us or call us and request that the part(s) be sent to you.

PARTS LIST

A-Door & Faceframe (1)	B - Side Panels (2)	C - Shelf (1)	D - Bottom (1)	E - Back Panel (1)
F - Large Face Board (1)	G - Small Face Board (1)	H - Toe Kick (1)		
I - Hardware Box (1): Corner Braces-4	Shelf Clips-4	Largest Screw-4	Medium Screw-8	Smallest Screw-12
J-Drawer Parts (1 set per drawer, depending on model #):				
a-Front (1),	b-Sides w / Slides (1pr),	c-Bottom(1),	d-Back(1),	e-Drawer Slides (1pr), f-Screws (4)

ASSEMBLY STEPS

STEP 1: Remove the Base unit parts and make sure all are accounted for. Place the Faceframe (A) down on a flat soft working surface to avoid scratching the cabinet.

STEP 2: Insect two Side Panels (B) into the grooves of Faceframe (A). Align the plastic half sections of the camlock connectors. Confirm all is flush and lock connectors with a screwdriver by turning the screw located on the camlock connector to the right 180 degrees, reference figure A.

STEP 3: Insert Bottom (D) into the grooves of Side Panels (B) and Faceframe (A).

STEP 4: Position the Back Panel (E) onto Side Panels (B) and work to seat into the side panel grooves and over the Bottom (D). Once the Back Panel is aligned and all is flush lock the camlock connectors as above. Position the Toe Kick (H) onto the Side Panels at the front base of the cabinet. Confirm that all is flush and lock the camlock connectors.

STEP 5: Stand the cabinet upright at this time and attach the 4 plastic Corner Braces in each corner of the cabinet using the 8 medium screws. The 4 Largest screws are for use in installation to tie the countertop to the base cabinet through the 4 Corner Braces.

STEP 6: Drawer assembly-Position Sides (b) to Drawer Front Panel (a), align and use two 1.2" countersunk screws (f) to fasten Sides and Drawer Front Panels at each side. Insert and slide Drawer Bottom (c) into the grooves of Drawer Sides (b), then position Drawer Back (d) to the Sides and Bottom, then use two 1.2" countersunk screws at each side to fasten Back and Sides. Repeat these steps to install the other drawer.

STEP 7: Slide the Drawer Slide (e) through the drawer opening in Faceframe until the drawer slide is aligned with the Faceframe, and slide the drawer back holder into the preattached drawer boot at the rear of the cabinet. Then locate and fasten into pre-drilled holes in Faceframe with the smallest screws provided. Repeat these steps to install the other drawer slides and insert the assembled drawers if necessary. Check drawer operation and adjust the drawer slide if necessary for best operation.

STEP 8: In order to mount the Large & Small Face Boards the Blind placed in the corner and located precisely in relation to the adjoining cabinets in the kitchen. Place the Large Face board on the cabinet and position for the best possible fit and appearance. Make location and secure with small screws provided. Keep at this process with the Small Face Board.

STEP 9: Your Base Cabinet is now complete. For installation, depending upon your existing wall condition (e.g. wood, concrete, tile) consult a professional contractor or building supplier for proper installing method and materials used. After mounting the cabinet side insert the Shelf Clips from the hardware box into the holes in the cabinet side panels at the desired height and slide in the Shelf (C).

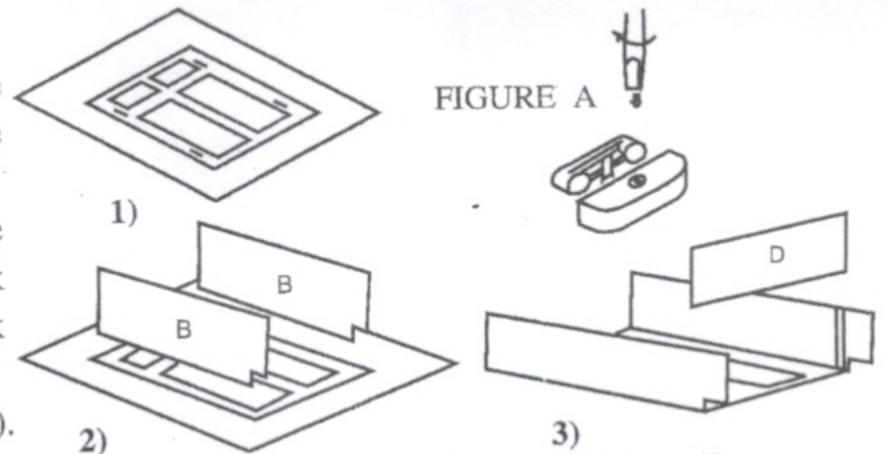


FIGURE A

